


# INSTALLATION INSTRUCTIONS

## ASB SERIES

1. Remove fixture from carton.
2. Check to see that lamp is securely tightened.
3. Remove wiring compartment cover (figure "B") and loosen hex bolt (see detail "A-1").
4. Adjust arm assembly to proper position (30 degrees). Tighten hex bolt securely.
5. Feed power supply leads through bottom of arm assembly and into wiring compartment.
6. Make necessary electrical connections and replace wiring compartment cover.
7. Insert set screws provided in hardware package into (4) holes in bottom of arm assembly (see detail "A-1").
8. Slip arm assembly into tenon top pole and tighten set screw at desired position (see figure "A").
9. Optional: Drill through hole provided in arm assembly and insert alignment thru bolt (see detail "A-1").

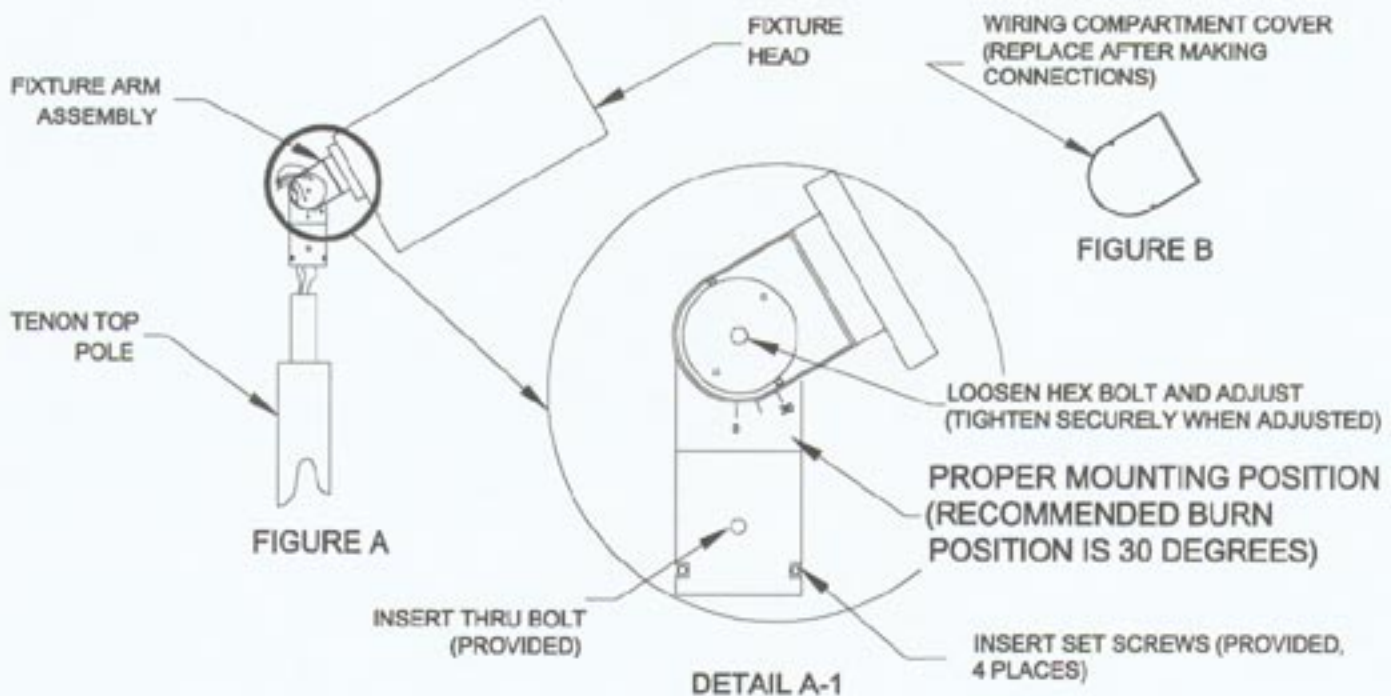

**CAUTION: FIXTURE IS FACTORY WIRED FOR 120 VOLTS. IF VOLTAGE IS 208V, 240V, OR 277V, CHANGE CONNECTION TO PROPER VOLTAGE ON BALLAST.**

**ATTENTION INSTALLER: RECOMMENDED AIMING POSITION IS 30 DEGREES.**



Performance Designed Lighting Products

1085 Johnson Dr., Buffalo Grove, Illinois 60089

phone 1800-544-4848

Fax (847) 275-0642

Rev 010001