

***INSTALLATION INSTRUCTIONS***  
***UNIVERSAL FIXTURE NO. 852***  
**RETROFIT WORK – PLYWOOD & DRYWALL CEILINGS ONLY**

1. For best efficiency, install fixture with front tip of lamp facing building.
2. Cut 13" square using protective shipping cardboard insert as template, (universal mounting, no joists or framing required. Will mount anywhere in ceiling.)
3. Place ballast with universal slip-fit mounting brackets on nearest ceiling joist, wood, or iron. Ballast should be mounted 12" from fixture (see Fig. 1)
4. Take socket housing (furnished with 1900 box and pre-wired whip) and ballast/power connections in 1900 box.
5. Raise fixture housing to socket box and attach to top using (2) ¼ turn fasteners provided with socket box.
6. Raise fixture through opening and flush flange with ceiling.
7. Install (4) "L" angles containing screws, working from inside of fixture. Insert long side of "L" angle through crossed slots. Allow "L" angle to drop and use tab to push sown. While holding with thumb, sandwich ceiling material and tighten screw.  
**KEEP FIXTURE FLUSH WITH FINISHED CEILING (See Fig. 2)**
8. **BEFORE LAMPING, REMOVE PROTECTIVE PLASTIC FROM REFLECTOR TO AVOID FIRE HAZARD!**
9. Install lamp and tighten securely. **DO NOT OVERTIGHTEN!**
10. Insert (2) #10 machine screws provided in hardware package into mounting holes on door frame. Slip fiber captive washers onto screws so screws will be retained for future maintenance.
11. Insert door frame hinges through slots on inner flange of fixture and engage onto pins inside fixture. Close door frame onto fixture and tighten screws securely.  
**DO NOT OVERTIGHTEN!**

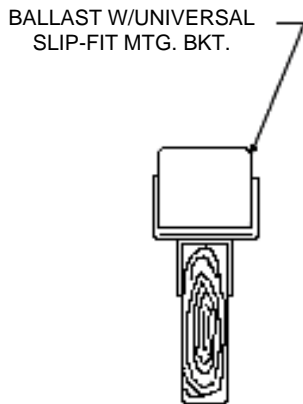


FIG. 1

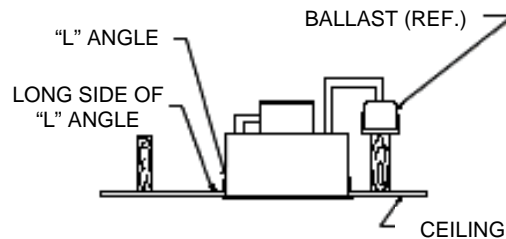


FIG. 2

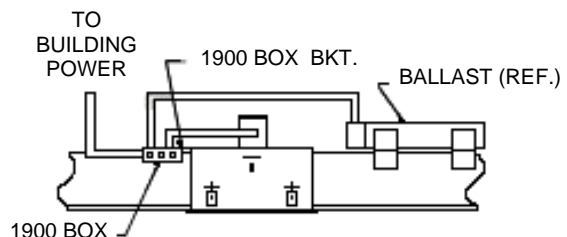


FIG. 3

