


# Trapezoid Wall Sconce Installation Instructions

1. Remove fixture from carton and open Door Panel by loosening (2) phillips head screws attaching Door Panel.
2. Reaching in through door opening in bottom of fixture, remove (4) 1/4-20 hex nuts attaching the Fixture Housing to the Ballast Plate. Set housing aside.
3. Remove Lamp and set aside.
4. Remove #10-32 hex nuts attaching the Ballast Cover to the Ballast Plate. Set Ballast Cover aside.
5. Determine mounting location on wall and mount Ballast Plate to wall. Fasteners provided by others.
6. Make necessary electrical connections.
7. Replace Ballast Cover, Lamp, and Fixture Housing.
8. Close Door Panel.

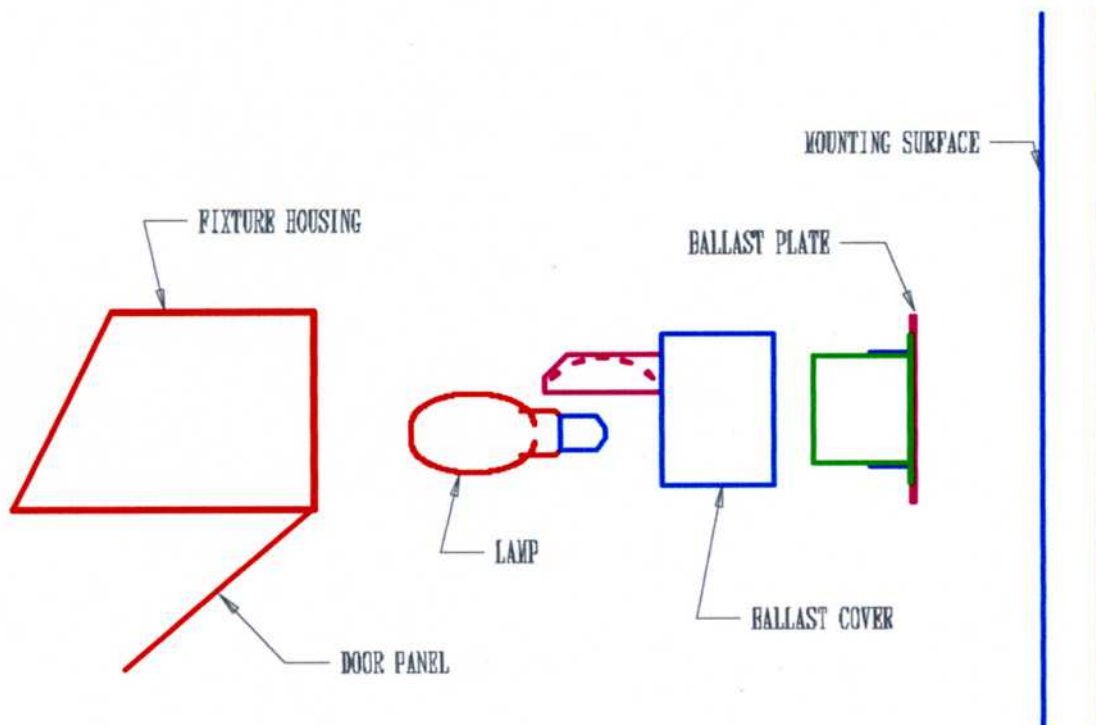

## Performance Designed Lighting Products

1085 Johnson Drive – Buffalo Grove, Illinois 60089

847-279-0627 fax 847-279-0642 toll free 800-544-4848